



## [HP HP0-382](#)

**Exam Name:** *Servicing HP Mid-Range Integrity Servers*

**Q & A :** 120 Q&As

***Pdf Demo***

### **Quality and Value for the HP0-382 Exam**

[Just4Exams Practice Exams](#) for HP Certification I HP0-382 are written to the highest standards of technical accuracy, using only certified subject matter experts and published authors for development.

### **100% Guarantee to Pass Your HP0-382 Exam**

If you do not pass the Certification I HP0-382 exam on your first attempt using our Just4Exams **HP0-382 testing engine and pdf study guide**, we will give you a FULL REFUND of your purchasing fee.

### **Downloadable, Interactive HP0-382 Testing engines and PDF Version**

Our Exam Preparation Material provides you everything you will need to take a [Certification I certification](#) examination. Details are researched and produced by [HP Certification](#) Experts who are constantly using industry experience to produce precise, and logical.

#### **Free HP0-382 Exams:**

***This is demo only, this pdf do not include the questions and answers picture***

Exam : HP HP0-382

Title : Servicing HP Mid-Range Integrity Servers

1. HP OpenView GlancePlus is available for which operating system or systems?

- A. Linux only
- B. HP-UX only
- C. Windows only
- D. HP-UX and Linux
- E. Linux and Windows

Answer: D

2. Click the Exhibit button.

In the path shown for HP-UX, what does the highlighted character represent?

- A. the PCI ID number
- B. the PCI function number
- C. the SCSI physical unit number
- D. the SCSI logical unit number

Answer: C

3. What is a feature of the nvrboot.efi utility?

- A. backup boot disk information
- B. save boot option configuration
- C. copy an NVRAM command
- D. install new utilities

Answer: B

4. Which SDA command shows a list of PCI devices and the associated hardware path values on an rx7620 server running OpenVMS?

- A. CLUE CONFIG
- B. SHOW DEVICE /PCI
- C. CLUE SYSTEM
- D. SHOW RESOURCES

Answer: A

5. On an rx7620 server running HP-UX, you just added a supported I/O card. Using "ioscan -fn", you receive the following message:

```
unknown -1 0/4/1/0/0/0/0 UNCLAIMED UNKNOWN PCI RAID (101e1960)
```

What does the "UNCLAIMED UNKNOWN" mean?

- A. The card should be configured first using "sautil."
- B. The appropriate driver is not installed in the kernel.
- C. No valid file system is configured on the connected disks.
- D. No disks are connected to the RAID controller, so no more information can be displayed.

Answer: B

6. Which command displays a list of devices and their system paths on an rx7620 server running HP-UX?

- A. show device
- B. ioscan
- C. scanpci
- D. list devicesD.list devices

Answer: B

7. Click the Exhibit button.

What is the path of the PCI-X slot identified by the arrow in the block diagram shown?

- A. 1/0/6/1/0
- B. 1/0/4/0/1
- C. 1/0/4/1/0
- D. 1/0/6/0/1

Answer: C

8. Which tools belong to the HP OpenView Storage Area Manager Suite? Select THREE.

- A. Storage Allocator
- B. Storage Media Operations
- C. Storage Builder
- D. Storage Virtual Replicator
- E. Storage Node Manager
- F. Storage Mirroring

Answer: ACE

9. Click the Exhibit button.

A customer's system has a performance issue. Which resource in the exhibit has poor performance?

- A. CPU
- B. memory
- C. disk
- D. networking
- E. disk

Answer: A

10. The following HP-UX hardware path is from an rx8620 system with an attached Server Expansion Unit (SEU)?  
3/0/6/1/0

Where is the device associated with this path located?

- A. Core I/O in the SEU
- B. PCI-X slot in the SEU
- C. Core I/O in the rx8620 enclosure
- D. PCI-X slot in the rx8620 enclosure

Answer: B

11. On an HP Integrity rx8620 server, which statement is correct for "cell-local memory" (CLM)?

- A. You should always use 100% CLM when doing a Windows installation.
- B. You can change from CLM to "interleaved memory" by changing kernel parameters.
- C. CLM is a feature of the HP-UX Virtual Partitions software and can be created with "\vparcreate -CLM:100:0:0 ....."
- D. To set up CLM, you have to install at least two echelons (four DIMMs) in special slots on the cell board (slot CLM0A-CLM0B-CLM0C and CLM0D).

Answer: A

12. What is the OpenVMS command to get an I/O device list on an HP Integrity server?

- A. ioscan
- B. scanpci
- C. scan device
- D. show deviceD.show device

Answer: D

13. Which error logs can be accessed through the MP on an rx7620 server? Select TWO.

- A. Firmware Log
- B. System Event Log
- C. Live Performance Log
- D. Kernel Debugging Log
- E. Forward Progress Log

Answer: BE

14. What is the purpose of the EFI driver for the Host Bus Adapter (HBA)?

- A. to boot to EFI shell
- B. only used for diagnostic
- C. boot support for an OS
- D. not used on Itanium systems

Answer: C

15. Using Linux, how do you check the amount of installed memory?

- A. Run the cstm command.
- B. Run the lspci command.
- C. View the /proc directory.
- D. View the /mem directory.
- E. Run the meminfo command.

Answer: C

16. Which EFI command shows the available filesystems and block devices?

- A. map -r
- B. reconnect -r
- C. drivers -b boot
- D. drvcfg -s [driver] [controller]

Answer: A

17. Which path below corresponds to the following ACPI path from the EFI device mapping table?

Acpi(HWP0002,0)/Pci(3|0)/Scsi(Pun6,Lun0)/HD(Part1,SigCC245042-3D87-11D)

- A. 0/0/0/3/6.0.0
- B. 0/0/0/3/0.6.0
- C. 0/0/3/0/0.6.0

D. 0/2/0/3/0.6.0

Answer: B

18. Click the Exhibit button.

In the hardware path shown for HP-UX, which device is highlighted?

- A. cell
- B. SBA
- C. target device
- D. PCI to PCI bridge device

Answer: D

19. On an HP Integrity server running Linux, you execute the lspci command and receive the following:

40:01.0 Fibre Channel: QLogic Corp. QLA2312 Fibre Channel Adapter (rev 03)

40:01.1 Fibre Channel: QLogic Corp. QLA2312 Fibre Channel Adapter (rev 03)

How do you interpret this? Select TWO.

- A. There are two separate Fibre Channel PCI cards installed.
- B. There is one Fibre Channel PCI card installed with two ports.
- C. The card(s) are installed in a PCI-slot connected to rope 2.
- D. The card(s) are installed in a PCI-slot connected to rope 4.

Answer: BC

20. Which conditions prevent the manageability firmware from applying 48 V DC power to an rx8620 server? Select TWO.

- A. insufficient number of CPU fans
- B. insufficient number of I/O fans
- C. the PC command issued to power down the cabinet
- D. ambient temperature in an OVERTEMP LOW condition
- E. insufficient number of main fans

Answer: BE

More [HP0-382 Braindumps](#) Information

#### Related HP0-382 Exams

HP0-M15	HP0-S18	HP0-M16	HP0-A01	HP0-M18
HP0-M19	HP0-S19	HP0-Y20	HP0-Y19	HP0-J24
HP0-J15	HP0-X02	HP0-063	HP0-J22	HP0-S17
HP0-Y21	HP0-Y11	HP0-M22	HP0-P10	HP0-P17

#### Other HP Exams

HP0-302	HP0-866	HP0-Y16	HP0-919	HP0-Y12
HP0-651	HP1-P44	HP0-D06	HP0-S14	HP2-E27
HP0-M23	HP0-P17	HP0-050	HP0-698	HP0-780
HP0-J31	HP0-255	HP0-P19	HP0-136	HP0-632