



[HP HP0-P10](#)

Exam Name: *HP Integrity Server Multi-OS Installation &Deployment*

Q & A : 147 Q&As

Pdf Demo

Quality and Value for the HP0-P10 Exam

[Just4Exams Practice Exams](#) for HP Certification I Certification III HP0-P10 are written to the highest standards of technical accuracy, using only certified subject matter experts and published authors for development.

100% Guarantee to Pass Your HP0-P10 Exam

If you do not pass the Certification I Certification III HP0-P10 exam on your first attempt using our Just4Exams ***HP0-P10 testing engine and pdf study guide***, we will give you a FULL REFUND of your purchasing fee.

Downloadable, Interactive HP0-P10 Testing engines and PDF Version

Our Exam Preparation Material provides you everything you will need to take a [Certification I certification Certification III certification](#) examination. Details are researched and produced by [HP Certification](#) Experts who are constantly using industry experience to produce precise, and logical.

Free HP0-P10 Exams:

This is demo only, this pdf do not include the questions and answers picture

Exam : HP HP0-P10

Title : HP Integrity Server Multi-OS Installation &Deployment

1. Click the Exhibit button.

Which number identifies the MP LAN port on the HP Integrity rx4640 server?

- A. 1
- B. 2
- C. 3
- D. 4

Answer: B

2. Which standard features are available in iLO 2 that were not available in iLO? (Select two.)

- A. Web GUI or text interface
- B. Secure Shell (SSH)
- C. Event Notification
- D. Systems Insight Manager (SIM) Group Actions
- E. Automatic hardware protection

Answer: BD

3. You have access to the MP. Which command do you use to enter the console mode?

- A. co
- B. rs
- C. ex
- D. cl

Answer: A

4. Click the Exhibit button.

Your customer has an rx2620 server with 2GB (8 x 256MB) installed. How can you upgrade the system to a minimum of 8GB? (Select two.)

- A. Add 8GB (4 x 2GB) for the remaining free slots.
- B. Add 6GB (2 x 2GB and 2 x 1GB) for the remaining free slots.
- C. Exchange the customer's installed memory for 8GB (8 x 1GB) memory.
- D. Mixed DIMM sizes are not supported. Exchange the customer's installed memory for 8GB (4 x 2GB) memory.

Answer: AC

5. Where is the diskpart.efi utility located?

- A. HP Smart Setup CD
- B. HP OpenVMS v 8.2 boot CD
- C. Red Hat Enterprise Server 3.0 64-Bit CD
- D. Windows Server 2003 Enterprise Edition boot CD

Answer: A

6. Which HP management component used to gather information on HP Integrity rx2620 servers is provided at no additional cost?

- A. HP Insight Diagnostics
- B. Management Processor
- C. Integrated Management Log
- D. HP Insight Management Agent

Answer: D

7. Which HP Integrity systems support iLO 2? (Select two.)

- A. rx3600
- B. bl60p
- C. rx6600
- D. rx2620
- E. rx4640

Answer: AC

8. While installing an rx2620 for the first time, which command do you use to display the date from the Management Processor (MP)?

- A. date
- B. df date
- C. list date
- D. show date

Answer: A

9. There is a CD with a EFI file system in the CD/DVD drive. From the "EFI Shell>" prompt, which command do you use to access the drive?

- A. :0
- B. fs0:
- C. sel0:
- D. disk0

Answer: B

10. Which command do you enter at the Management Processor (MP) prompt to configure the LAN?

- A. lc
- B. mc
- C. bind
- D. ipconfig
- E. lanconfig

Answer: A

11. An Integrity rx3600 server is running Microsoft Windows Server 2003 Enterprise Edition. Which command do you use to gracefully shut down this system when the Windows console and terminal services are not responding?

- A. Use the MP to issue a PC -OFF command.
- B. Enter shutdown from the SAC prompt.
- C. Use the MP to issue the MP shutdown command.
- D. Press and hold the system power button until the system powers off.

Answer: B

12. Which option is available by default on the EFI Boot Manager menu?

- A. Configuration Menu
- B. LAN Configuration Menu
- C. Backup Configuration Menu
- D. Boot Option Maintenance Menu

Answer: D

13. You need to generate an SSL Certificate to access the MP. Which command do you use?

- A. SO
- B. CA
- C. DC
- D. CR RSA

Answer: A

14. What is the minimally supported general distribution of HP OpenVMS on an Integrity rx2620 server?

- A. 7.3
- B. 8.1
- C. 8.2
- D. 8.3

Answer: C

15. How can you access the UUID on an entry-level HP Integrity server? (Select two.)

- A. The UUID is written on the system information label of the server.
- B. At the EFI Boot Manager menu, access the EFI Shell; then enter info sys.
- C. At the Management Processor (MP) main menu, go to the Command Menu and enter id.
- D. At the EFI Boot Manager menu, access the System Configuration menu and select System UUID.
- E. If you access the EFI Boot Manager menu using integrated Lights-Out (iLO), the UUID displays automatically.

Answer: AB

16. You replaced a hardware component. The firmware version of the new component is different from other similar components in the server. Which action is needed?

- A. Update to the latest version of firmware.
- B. No manual action is needed. The EFI automatically updates the firmware.
- C. Modify the firmware version of the new component to match the earlier firmware version of the existing components.
- D. Discuss with the customer which version of firmware they are using, and recommend updating to the latest version if possible.

Answer: D

17. Click the Exhibit button.

A customer plans to add 4GB memory to an existing 1GB main memory system (4x 256MB) on an rx2620 server. Which upgrade configurations provide the best performance? (Select two.)

- A. add 2 DIMMs; 2GB each
- B. add 4 DIMMs; 1GB each
- C. add 8 DIMMs; 512MB each
- D. add 16 DIMMs; 256MB each

Answer: BC

18. What is the MP command to configure an HP Integrity rx3600 for network access?

- A. lc
- B. ls
- C. lanboot
- D. sa

Answer: A

19. If a customer purchases HP OpenVMS Mission Critical Operating Environment (MCOE), what additional software is needed to run OpenVMS clusters?

- A. OpenVMS Cluster Kit
- B. HP Serviceguard for OpenVMS
- C. OpenVMS does not support clustering.
- D. None, the software is integrated into the operating system.

Answer: D

20. Which interfaces are used to connect to the Management Processor (MP)? (Select two.)

- A. USB
- B. LAN
- C. PS2
- D. Serial port
- E. Parallel port

Answer: BD

More [HP0-P10 Braindumps](#) Information

Related HP0-P10 Exams

HP0-M15	HP0-S18	HP0-M16	HP0-A01	HP0-M18
HP0-M19	HP0-S19	HP0-Y20	HP0-Y19	HP0-J24
HP0-J15	HP0-X02	HP0-063	HP0-J22	HP0-S17
HP0-Y21	HP0-Y11	HP0-M22	HP0-P10	HP0-P17

Other HP Exams

HP0-761	HP0-J17	HP0-M22	HP0-171	HP2-K14
HP0-790	HP0-449	HP0-197	HP0-438	HP0-784
HP0-742	HP0-051	HP0-M12	HP2-027	HP0-P11
HP0-460	HP0-490	HP0-920	HP2-F01	HP0-759